



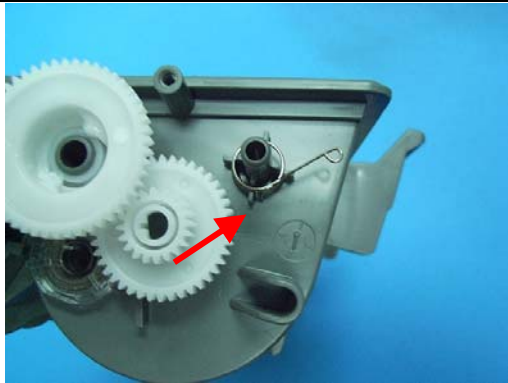
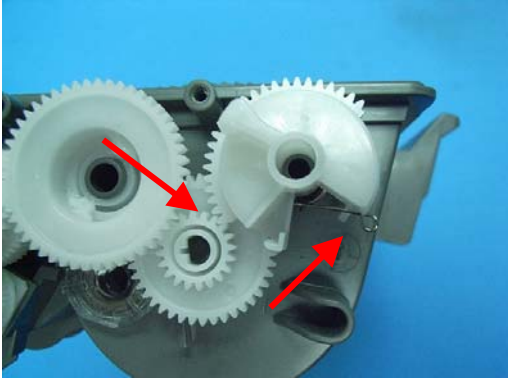
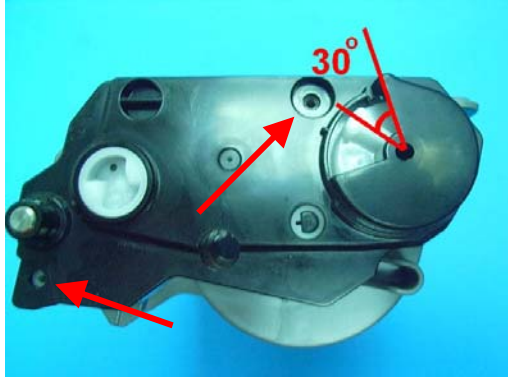


FOR A BETTER IMPRESSION

How to Install The Brother TN3170/TN580/TN3185 (OLD STYLE) Reset Lever & Spring on the Brother TN3280 Cartridge

Brother TN3280	BROTHER TN3170/TN580/TN3185 (OLD STYLE) RESET LEVER & SPRING
	

Procedures

	<p align="center"><u>Step 1</u></p> <p>Installing the Reset Lever and Spring. Make sure the straight tail of the Spring fits into a notch at the base of the gear shaft.</p>
	<p align="center"><u>Step 2</u></p> <p>The Reset Lever must be positioned against the stop on the right side of the hopper and the teeth of the Reset Lever should start to mesh with the other gear as shown. The Spring tail should be hooked on to the tab of the Reset Lever.</p>
	<p align="center"><u>Step3</u></p> <p>Install the gear cover plate and two screws but make sure the position of the Reset Lever does not move. The rib of the Reset Lever should be at about 30 degrees with the end of the cutout on the End Cap. After assembly, position of the rib on the Reset Lever must be as shown. If it is not and has moved, repeat steps 1, 2 and 3.</p>